





## Garden Bench Assembly Instructions

**Thank you** for your purchase of the Built to Last™ Garden Bench. Simply follow the directions below and you will soon be ready to enjoy your furniture. Please note that your receipt is in the packing list pocket on the outside of box #1. Please call us at 252.232.0055 if you have any problems with assembly. Your satisfaction is guaranteed.

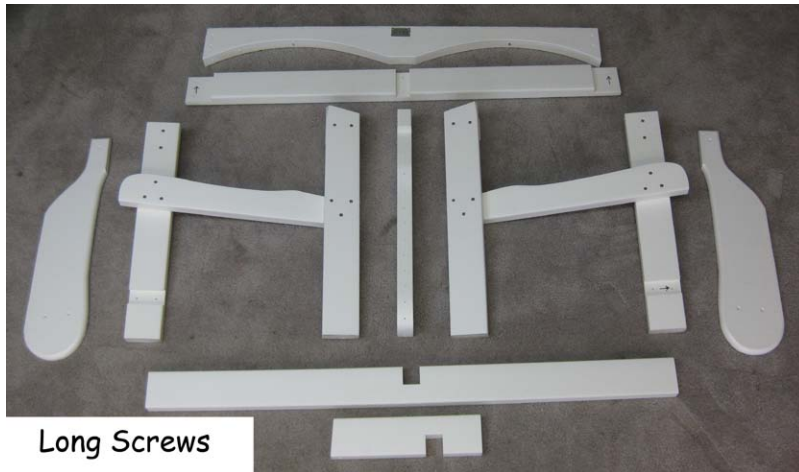

Group the pieces as shown in the two group photos.

For each group of pieces remove the indicated screws from the bag and start the screws into the countersunk holes on the pieces. Advance the screws into the hole until they protrude slightly from the other side. The protruding screw will help you line up pieces when assembling.

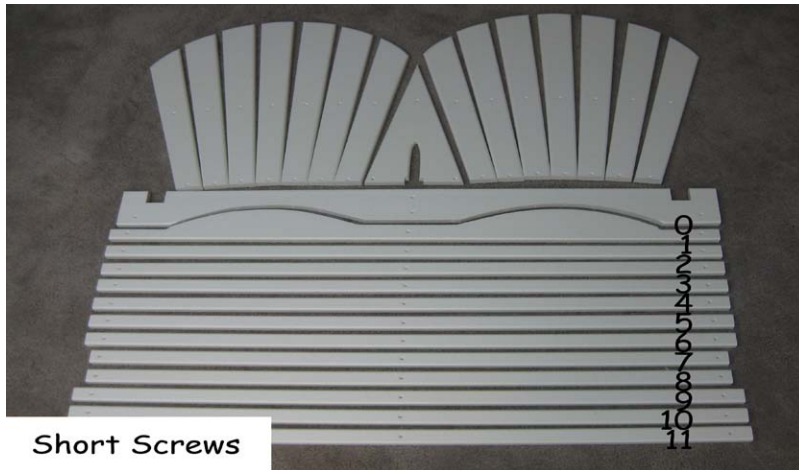

Notice that the seat slats are numbered on the underside of each slat - align these in order as shown at left.

After all the screws are started on all pieces, you are ready to assemble. **Follow the sequence on the next page. DIRECTIONS CONTINUED ON REVERSE --->**

**Keeping your furniture clean:** Maintenance requirements will vary by location. Generally, an occasional rinsing by hose will keep the furniture clean. A pressure washer will do the best job but be careful not to apply too much pressure (which will "feather" the surface). For tough dirt/stains spray Clorox Cleanup or Tilex onto the furniture, allow to sit for a few minutes and rinse off with a hose or pressure wash. Stubborn stains may require a little scrubbing with a scrub-brush. Another option is a mixture of TSP, water and clorox (TSP is found in the paint section of the hardware store).

**Important:** Make sure the pieces being attached are pressed against each other with no gap in between and that the screws are lined up to the predrilled holes. Do not overtighten the screws. Advance the screw until snug. **DO NOT OVERTIGHTEN!** If your drill is not variable speed be very careful not to drive the screw in too far.



**Step 4:** Start with the middle piece on each side - screw in top screw first; then push back frame to line up bottom screw. **DO NOT OVERTIGHTEN BOTTOM SCREWS!**



**Step 6:** The slats are numbered underneath. Attach #0, then attach the shorter slats #7&8. This will make it easier to line up the holes for the other slats.



Enjoy your Garden Bench!!!